



RRRB - JE



CIVIL

Railway Recruitment Board

Volume - 4

SOIL Foundation Engineering



CONTENTS

S.No.	Topic	Page No.
1.	Basic Types of Soil	1 – 2
	Objective Sheet	3 – 4
2.	Properties of Soils	5 – 25
	Objective Sheet	26 – 36
3.	Classification of Soils	37 – 40
	Objective Sheet	41 – 44
4.	Soil Structure & Clay Minerals	45 – 47
	Objective Sheet	48 – 50
5.	Soil Compaction	51 – 55
	Objective Sheet	56 – 60
6.	Effective Stress & Permeability	61 – 78
	Objective Sheet	79 – 88
7.	Seepage Analysis	89 – 95
	Objective Sheet	96 – 102
8.	Vertical Stresses Below Applied Loads	103 – 107
	Objective Sheet	108 – 111
9.	Compressibility & Consolidation of Soil	112 – 132
	Objective Sheet	133 – 142

10. Shear Strength of Soils	143 – 160
Objective Sheet.....	161 – 172
11. Lateral Earth Pressures & Retaining Walls	173 – 187
Objective Sheet.....	188 – 194
12. Bearing Capacity & Shallow Foundation	195 – 217
Objective Sheet.....	218 – 224

□□□


PROPERTIES OF SOILS

THEORY

2.1 PROPERTIES OF SOILS


2.1.1 Phase Diagram

- Soil mass is in general a three phase system composed to solid, liquid and gaseous matter.
- The diagrammatic representation of the different phases in a soil mass is called the “phase diagram.”
- A 3-phase system is applicable for partially saturated soil whereas, a 2-phase system is for saturated and dry states of soil.

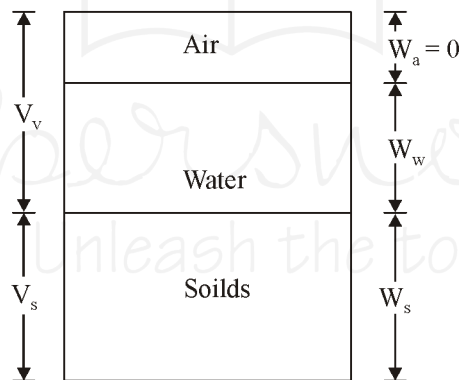


3-Phase

(Partially Saturated)

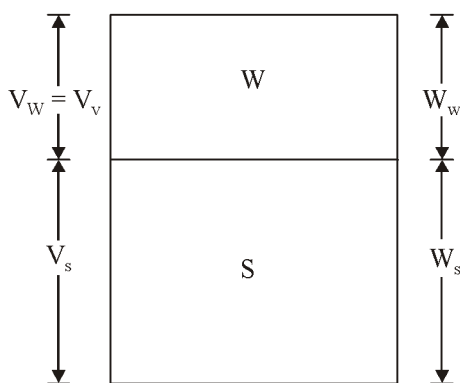

2-Phase (Saturated)

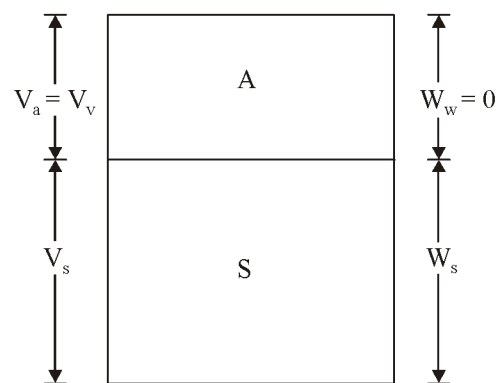

2-Phase (Dry)

2.1.2 Water Content

$$w = \frac{W_w}{W_s} \times 100$$

W_w = Weight of water

W_s = Weight of solids

There can be no upper limit to water content. i.e., $w \geq 0$

2.1.3 Void Ratio

$$e = \frac{V_v}{V_s}$$

V_v = Volume of voids

V_s = Volume of solids

Void ratio of fine grained soils are generally higher than those of coarse grained soils.

In general $e > 0$ i.e., no upper limit for void ratio.

2.1.4 Porosity (% voids)

$$n = \frac{V_v}{V} \times 100$$

V_v = Volume of voids

V = Total volume of soil

Porosity cannot equal to 100% i.e.,

$$0 < n < 100$$

Note : In comparison to porosity, void ratio is more frequently used because volume of solids remains same, whereas total volume changes.

2.1.5 Degree of Saturation

$$S = \frac{V_w}{V_v} \times 100$$

where

V_w = Volume of water

V_v = Volume of voids

$$0 \leq S \leq 100$$

for perfectly dry soil

$$S = 0$$

for Fully saturated soil

$$S = 100\%$$

2.1.6 Air Content

$$a_c = \frac{V_a}{V_v} = 1 - S$$

$$0\% \leq a_c \leq 100\%$$

Percentage air voids (n_a)

$$n_a = \frac{V_a}{V} \times 100$$

$$0\% \leq n_a < 100\%$$

Where

V_a = Volume of air

V = Total Volume

2.1.7 Unit Weight

(a) **Bulk Unit Weight**

$$\gamma = \frac{W}{V} = \frac{W_s + W_w}{V_s + V_w + V_a}$$

Thus Bulk unit weight is total weight per unit volume.

(b) **Dry Unit Weight**

is the weight of soil solids per unit volume.

$$\gamma_d = \frac{W_s}{V}$$

Dry unit weight is used as a measure of denseness of soil. More dry unit weight means more compacted soil.

(c) **Saturated Unit Weight** : It is the ratio of total weight of fully saturated soil sample to its total volume.

$$\gamma_{sat} = \frac{W_{sat}}{V}$$

(d) **Submerged Unit Weight** : $\gamma' = \gamma_{submerged} = \gamma_{sat} - \gamma_{water}$. Buoyant unit weight (γ'). It is the submerged weight of soil solids per unit volume.

γ' is roughly $\frac{1}{2}$ of saturated unit weight.

Note : $\gamma_{solid} > \gamma_{sat} > \gamma_{bulk} > \gamma_{dry} > \gamma_{sub}$

(e) **Unit Weight of Solids** : It is the ratio weight of solids to the volume of solids present in given soil mass.

$$\gamma_{solid} = \frac{W_s}{V_s}$$

2.1.8 Specific Gravity

Absolute/true Specific Gravity : Specific gravity of soil solid (G) is the ratio of the weight of a given volume of solids to the weight of an equivalent volume of water at 4°C.

$$G = \frac{W_s}{V_s \cdot \gamma_w} = \frac{\gamma_s}{\gamma_w}$$

Apparent or Mass Specific Gravity (G_m) : Mass specific gravity is the specific gravity of the soil mass and is defined as the ratio of the total weight of a given mass of soil to the weight of an equivalent volume of water.

$$G_m = \frac{W}{V\gamma_w} = \frac{\gamma}{\gamma_w}$$

2.2 SOME IMPORTANT RELATIONSHIPS

Relation between W_s , W and w :

$$W_s = \frac{W}{1+w}$$

Relation between e and n

$$n = \frac{e}{1+e} \text{ OR } e = \frac{n}{1-n}$$

Relation between e , w , G and S :

$$Se = w.G$$

Bulk unit weight (γ) in terms of G , e , w and γ_w

$$\gamma = \frac{G\gamma_w(1+w)}{(1+e)}$$

Saturated unit weight (γ_{sat}) in terms of G , e and γ_w (when $S = 1$)

$$\gamma_{sat} = \left[\frac{G+e}{1+e} \right] \cdot \gamma_w$$

Dry unit weight (γ_d) in terms of G , e and γ_w (when $S = 0$)

$$\gamma_d = \frac{G\gamma_w}{1+e}$$

Submerged unit weight (γ') in terms of G , e

and γ_w

$$\gamma' = \left(\frac{G-1}{1+e} \right) \cdot \gamma_w$$

Relation between γ , γ_d and γ_w

$$\gamma_d = \frac{\gamma}{1+w}$$

2.3 METHODS FOR DETERMINATION OF WATER CONTENT

2.3.1 Pycnometer Method

- Quick method
- Capacity of pycnometer = 900 ml.
- This method is more suitable for cohesionless soils.
- Used when Specific gravity of soil solids is known.


Let

W_1 = Wt. of empty dried pycnometer bottle

W_2 = Wt. of pycnometer + Moist Soil

W_3 = Wt. of pycnometer + Soil + Water

W_4 = Wt. of pycnometer + Water

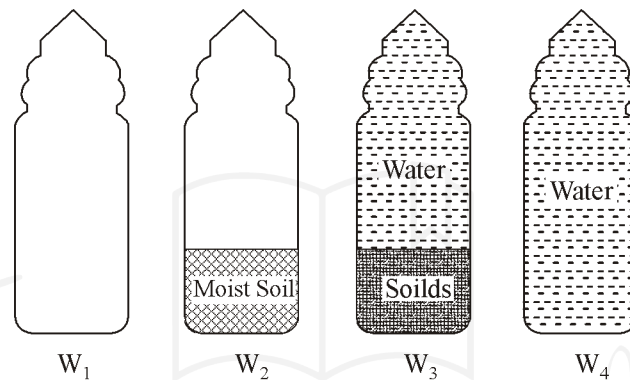

Now, water content $w = \frac{W_w}{W_s} \times 100$

$$\text{Weight of water} = (W_2 - W_1) - W_s \quad \dots(i)$$

If from W_3 , the weight of solids W_s could be removed and replaced by the weight of an equivalent volume of water, the weight W_4 will be:

$$W_4 = W_3 - W_s + \frac{W_s}{G\gamma_w} \cdot \gamma_w \quad \left[\because V_s = \frac{W_s}{\gamma_s} \text{ and } G = \frac{\gamma_s}{\gamma_w} \right]$$

$$\Rightarrow W_s = (W_3 - W_4) \cdot \frac{G}{G - 1} \quad \dots(ii)$$

From (i) and (ii)

$$w = \left[\frac{(W_2 - W_1)}{(W_3 - W_4)} \cdot \left(\frac{G - 1}{G} \right) - 1 \right] \times 100\%$$

2.3.2 Oven Drying Method

- Simplest and most accurate method
- Soil sample is dried in a controlled temperature (105 – 110° C).
- For organic soils, temperature is about 60° C.
- Sample is dried for 24 hrs.

- For sandy soils, complete drying can be achieved in 4 to 6 hrs.

Water content is calculated as :

$$w = \frac{W_2 - W_3}{W_3 - W_1} \times 100\%$$

where

W_1 = weight of container

W_2 = weight of container + moist sample

W_3 = weight of container + dried sample


Weight of water = $W_2 - W_3$

Weight of solids = $W_3 - W_1$

2.3.3 Calcium Carbide Method/Rapid Moisture Meter Method

Quick method (required 5 to 7 minutes) but may not give accurate results.

The reaction involved is



Soil sample weight 4 – 6 gms.

The gauge reads water content with respect to wet soil.

i.e.,

$$w_r = \frac{W_w}{W_s + W_w}$$

Water content of the soil is determined indirectly from the pressure of acetylene (C_2H_2) gas formed.

Actual water content

$$w = \frac{w_r}{1 - w_r} \times 100\%$$

2.3.4 Sand Bath Method

- Quick, field method
- Used when electric oven is not available.
- Soil sample is put in a container and dried by placing it in a sand bath, which is heated on kerosene store.
- Water content is determined by using same formula as in oven drying method.

2.3.5 Torsion Balance Moisture Meter Method

- Quick method for use in laboratory.
- Infrared radiations are used for drying samples.
- **Principle** : The torsion wire is prestressed accurately to an extent equal to 100% of the scale reading. Then the sample is evenly distributed on the balance pan to counteract the prestressed torsion and the scale is brought back to zero. As the sample dries, the loss in weight is continuously balanced by the rotation of a drum calibrated directly to read moisture % on wet basis.

2.4 DETERMINATION OF SPECIFIC GRAVITY OF SOIL SOLIDS

- Pycnometer method is used.
- Instead of pycnometer. Density bottle (50 ml) OR Flask (500 ml) can also be used.


Let,

W_1 = Weight of empty pycnometer

W_2 = Weight of pycnometer + soil sample (oven dried)

W_3 = Weight of pycnometer + soil solids + water

W_4 = Weight of pycnometer + water

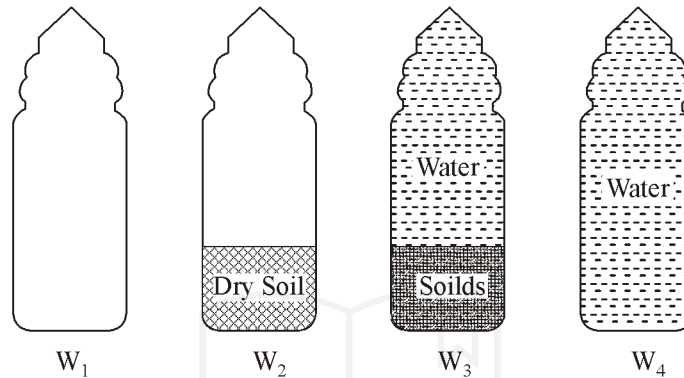

$$G = \frac{W_2 - W_1}{(W_2 - W_1) - (W_3 - W_4)}$$

⇒

$$G = \frac{W_s}{W_s - W_3 + W_4}$$

Note : Specific gravity values are generally reported at 27° C (in India)

If T° C is the test temperature then Sp. Gr. at 27° C is given by,

$$G_{27^\circ\text{C}} = G_T \frac{\text{Unit weight of water at } T^\circ\text{C}}{\text{Unit weight of water at } 27^\circ\text{C}}$$

If kerosene (better wetting agent) is used instead of water then.

$$G = \frac{W_s}{W_s - W_3 + W_4} \times K \quad [K = \text{Sp. gr. of kerosene}]$$

G can also be determined indirectly by using shrinkage limit.

2.5 METHODS FOR THE DETERMINATION OF IN SITU UNIT WEIGHT

2.5.1 Core-Cutter Method

- Used in case of non-cohesive soils.
- Cannot be used in case of hard and gravelly soils.
- Method consists of driving a core-cutter (Volume = 1000 cc) into the soil and removing it, the cutter filled with soil is weighed. Volume of cutter is known from its dimensions and in situ unit weight

is obtained by dividing soil weight by volume of cutter. $\gamma = \frac{W}{V}$

- If water content is known in laboratory, the dry unit weight can also be computed.

$$\gamma_d = \frac{\gamma}{1 + w}$$

2.5.2 Sand Replacement Method

- Used in case of hard and gravelly soils.
- A hole in ground is made. The excavated soil is weighed. The volume of hole is determined by replacing it with sand. In situ unit weight is obtained by dividing weight of excavated soil with volume of hole.

2.5.3 Water Displacement Method

- Suitable for cohesive soils only, where it is possible to have a lump sample.
- A regular shape, well trimmed sample is weighed. (W_1). It is coated with paraffin wax and again weighed (W_2). The sample is now placed in a metal container filled with water upto the brim. Let the volume of displaced water be V_w . Then volume of uncoated specimen is calculated as,

$$V = V_w - \left(\frac{W_2 - W_1}{\gamma_p} \right)$$

where

γ_p = unit weight of paraffin wax

and bulk unit weight of soil

$$\gamma = \frac{W_1}{V}$$

2.6 GRAIN SIZE DISTRIBUTION

Grain size analysis/particle size analysis involves the following methods :

- (i) For coarse grained soils – sieve analysis further,
 - for coarser of coarse – Dry sieve analysis
 - for finer of coarse – Wet sieve analysis.
- (ii) For fine grained soils – sedimentation analysis,
 - It involves two methods
 - (a) Hydrometer method
 - (b) Pipette method.

2.6.1 Analysis of Coarse Grained Soils

(a) Sieve Analysis : (For Coarse Grained Soils)

- The fraction retained on 4.75 mm sieve is called the gravel fraction which is subjected to coarse sieve analysis.
- The material passing 4.75 mm sieve is further subjected to fine sieve analysis if it is sand or to a combined wet sieve and sedimentation analysis if silt and clay sizes are also present.
- **Concept of “Percentage finer”**

$$\% \text{ retained on a particular sieve} = \frac{\text{Weight of soil retained on that sieve}}{\text{Total weight of soil taken}} \times 100$$

Cumulative % retained = sum of % retained on all sieves of larger sizes and the % retained on that particular sieve.

“Percentage finer” than the sieve under reference = 100% – Cumulative % retained.

2.6.2 Analysis of Fine Grained Soils

Sedimentation Analysis : Most convenient for determining of grain size distribution of the soil fraction finer than 75 μm .

- The analysis is based on stokes’s law.
- If a single sphere is allowed to fall freely through a liquid of infinite extent, its vertical velocity is first increased rapidly under the action of gravity, but a constant velocity called the terminal velocity is reached with in a short time.
- According to stokes law, the terminal velocity is given by,

$$V = \frac{g}{18} \frac{\rho_s - \rho_w}{\mu} D^2$$

ρ_s = density of grains (g/cm^3)

ρ_w = density of water (g/cm^3)

μ = dynamic viscosity of water

g = acceleration due to gravity (cm/s^2)

D = Diameter of grain (cm)

- (i) By putting the values at 20° C, we get,

$$V \approx 91 D^2 \quad \text{.....at } 20^\circ \text{ C}$$

where v is in cm/s

and D is in mm .

- (ii) $V \approx 107 D^2 \quad \text{.....at } 27^\circ \text{ C}$

If ‘ h ’ the height through which particle falls in time ‘ t ’, then

$$\frac{h}{t} = k.D^2$$

$$\therefore \frac{D_1}{D_2} = \sqrt{\frac{h_1 \cdot t_2}{h_2 \cdot t_1}}$$

- Stokes law is applicable for spheres of diameter between 0.2 mm and 0.0002 mm.
- Spheres of diameter larger than 0.2 mm falling through water cause turbulence, whereas, for spheres with diameter less than 0.0002 mm. Brownian motion takes place and the velocity of settlement is too small for a accurate measurement.
- **Limitations of Stokes Law :** The analysis is based on the assumption that the falling grain is spherical. But in soils, the finer particles are never truly spherical.
- Stoke’s law considers the velocity of free fall of a single sphere in a suspension of infinite extent, whereas, the grain size analysis is usually carried out in a glass jar in which the extent of liquid is limited.
- The finer grains of the soil carry charge on their surface and have a tendency for floc formation. If the tendency to floc formation is not prevented, the diameter measured will be the diameter of the floc and not of the individual grain.

- **Analysis of Fine Grained Soils** : First step involved is preparation of soil sample, which is mixed with water and suspension is made.

Treatment given to soil sample :

- **Pre Treatment** : given before making of soil suspension to remove organic matters and calcium compounds.
- For organic matter – oxidizing agent is used (e.g., H_2O_2)
- For calcium compounds – Acids are used (e.g., HCl)
- **Post Treatment** : Given after preparation of soil suspension to break the flocss formed due to presence of surface electric charges.
- The dispersing (deflocculating) agents used are sodium hexameta phosphate or calgon, sodium oxalate, etc.
- The analysis is carried out by the Hydrometer method or the pipette method. The principle of the test is same in both methods. The difference lies only in the method of making observations.
- **Pipette Method** : In this method, the weight of solids per cc of suspension is determined directly by collecting 10 cc of soil suspension from a specified sampling depth.
- If m_d = dry mass (obtained after drying the sample) then, mass present in unit volume of pipette.

$$= \frac{m_d}{\text{vol. of pipette}(V_p)} = \frac{m_d}{10\text{ml.}(V_p)}$$


- If M_d = total mass of soil dissolved in total volume of water (V). then mass/unit volume = $\frac{M_d}{V}$

Therefore. % finer is given by $\% N = \frac{\frac{m_d}{V_p}}{\frac{M_d}{V}}$

- If m is the mass of dispersing agent dissolved in the total volume V. then actual % finer.

$$\% N = \frac{\frac{m_d}{V_p} - \frac{m}{V}}{\frac{M_d}{V}}$$

- **Hydrometer Method** : In this method the weight of solids present at any time is calculated indirectly by reading the density of soil suspension.
- Calibration of hydrometer : Establishing a relation between the hydrometer reading R_{11} and effective depth (H_e).
- The effective depth is the distance from the surface of the soil suspension to be the level at which the density of soil suspension is being measured.

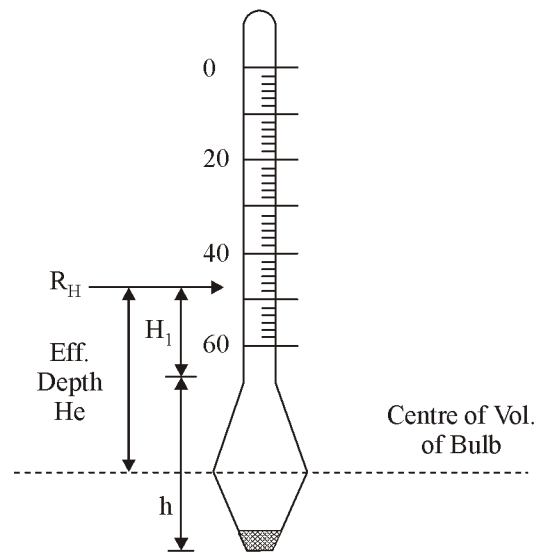

- Effective depth is calculated as

$$H_e = H_1 + \frac{1}{2} \left(h - \frac{V_H}{A_j} \right)$$

where,

H_1 = distance (cm) between any hydrometer reading and neck.

h = length of hydrometer bulb

V_H = volume of hydrometer bulb

A_j = area of the cross section of the Jar.

Reading of Hydrometer is related to sp. gr. or density of soil suspension as:

$$G_{ss} = 1 + \frac{R_H}{1000}$$

Thus a reading of $R_H = 25$ means. $G_{ss} = 1.025$ and a reading of $R_H = -25$ means. $G_{ss} = 0.975$

% finer is given as:

$$N = \frac{G}{G-1} \cdot \gamma_w \cdot \frac{V}{W} \cdot \frac{R_H}{10} \%$$

where,

G = Specific gravity of soil solids

R_H = Final corrected value of hydrometer

V = Total volume of soil suspension

W = Weight of soil mass dissolved.

Corrections to Hydrometer Reading

Meniscus Correction: (C_m) : Hydrometer reading is always corresponding to the upper level of meniscus. But it should be taken at lower level, Since hydrometer reading increase down word, Therefore, meniscus correction is always positive ($+C_m$).

Temperature Correction : (C_t) : Hydrometers are generally calibrated at 27°C. If the test temperature is above the standard (27°C) the correction is added and, if below, it is subtracted.


Dispersing/Deflocculating Agent Correction : (C_d) : The correction due to rise in specific gravity of the suspension on account of the addition of the deflocculating agent is called Dispersing agent correction (C_d).

- C_d is always negative.

The corrected hydrometer reading is given by

$$(R_H) = R_H + C_m \pm C_t - C_d$$

2.7 GRAIN SIZE DISTRIBUTION CURVES

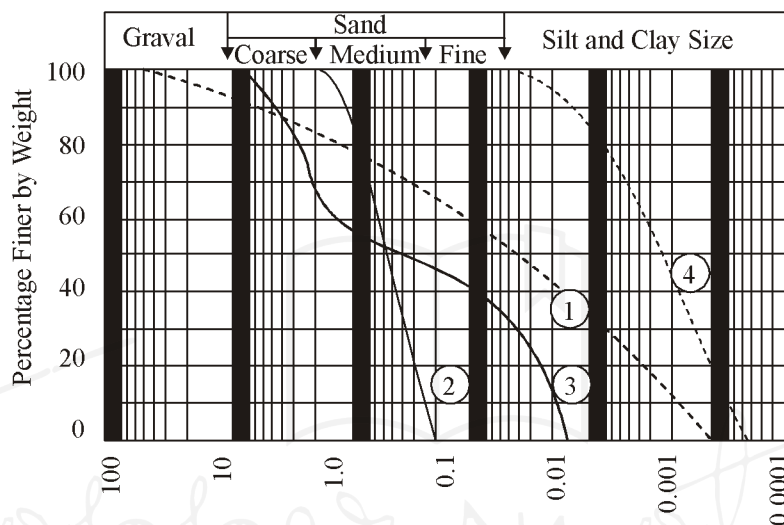

Curve 1 : Well graded soil: good representation of grain sizes over a wide range and its gradation curve is smooth.

Curve 2 : Poorly graded soil/Uniform gradation : It is either an excess or a deficiency of certain particle sizes or has most of the particles about the same size.

Curve 3 : Gap graded soil : In this case some of the particle sizes are missing.

Curve 2 : Predominantly coarse soil.

Curve 4 : Predominantly fine soil.

- If slope of the curve is steep, soil is poorly graded.
- If slope is inclined, soil is well graded.
- The diameter D_{10} corresponds to 10% of the sample finer in weight on the Grain size distribution curve.
- This diameter D_{10} is called effective size.
- Similarly D_{30} and D_{60} are grain diameter (mm) corresponding to 30% finer and 60% finer.
- The shape parameters related to these are

(a) Coefficient of Uniformity $C_u = \frac{D_{60}}{D_{10}}$

(b) Coefficient of Curvature: $C_c = \frac{D_{30}^2}{D_{10} \times D_{60}}$

For a soil to be well graded:


$[1 < C_c < 3]$ and $[Cu > 4]$ for gravels;

$[C_u > 6]$ for sands.

$C_u \approx 1$ for uniform soils/poorly graded soils.

2.8 CONSISTENCY OF CLAYS : ATTERBERG LIMITS

- The relative ease with which a soil can be deformed.
- In practice, consistency is a property associated only with fine grained soils, especially clays.
- Four stages of consistency are used to describe the state of a clayey soil
 - (i) The liquid state
 - (ii) The plastic state
 - (iii) The semisolid state
 - (iv) The solid state.
- Shrinkage limit is the smallest value of water content at complete saturation of soil mass.

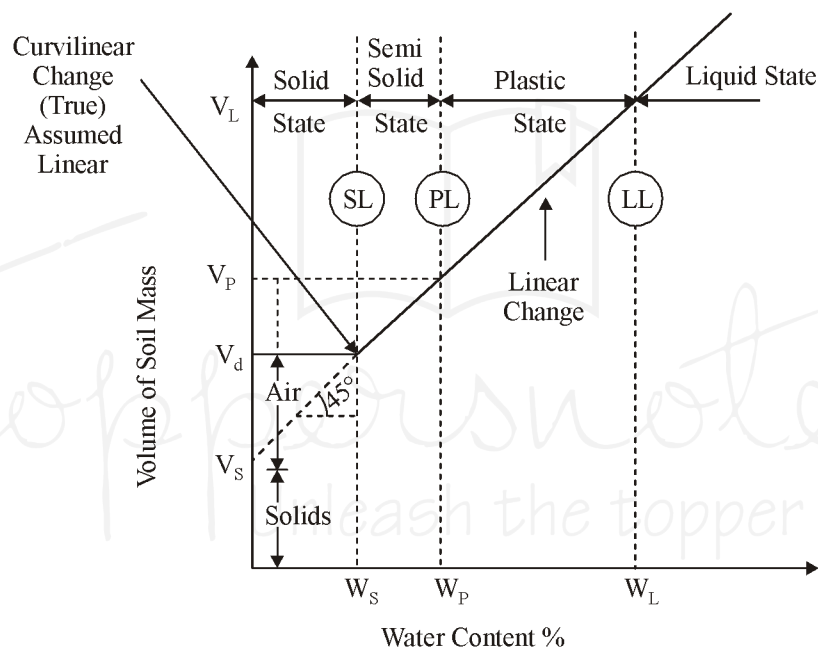

$LL = w_L =$ liquid limit

$PL = w_p =$ Plastic limit

$SL = w_s =$ Shrinkage limit

$V_L =$ Volume of soil mass at LL

$V_p =$ Volume of soil mass at PL

$V_d =$ Volume of soil mass at SL

$V_s =$ Volume of solids.

- The boundary water contents at which the soil undergoes a change from one state to another are called **Consistency limits**. They are also known as Atterberg limits after Swedish scientist Atterberg, who first demonstrated the significance of these limits.
- **Liquid Limit** : The boundary water content between the liquid state and the plastic state is called the liquid limit.

- This is the stage when the sample changes from possessing no shearing strength to having an infinitesimal shear strength.
- **Plastic Limit** : The water content at which soil sample changes from plastic state to semisolid state. (i.e., soil loses its plasticity and behaves like a brittle material when goes to semisolid state).
- **Shrinkage Limit** : A state when a decrease in moisture, leads to no change in volume of soil mass; the sample changes from semisolid to solid state. The boundary water content is called shrinkage limit. (SL)

Note : SL soil sample is Just fully saturated ($S = 100\%$)

- Liquid limit is also defined as the water content at which a groove cut in a pat of soil by a grooving tool of standard dimensions will flow together for a distance of 13 mm under the impact of 25 blows in a standard liquid limit device.
- Plastic limit is also defined as the water content at which a soil would just begin to crumble when rolled into a thread of approximately 3 mm diameter.

2.9 INDEX PROPERTIES OF SOIL

2.9.1 Plasticity Index (I_p)

- is the range of moisture content over which a soil exhibits plasticity.

$$I_p = w_L - w_P$$

w_L = water content at LL

w_P = water content at PL

- Clay soils possessing high values of liquid limit and plasticity Index are referred to as highly plastic or Fat clays, and those with low values are described as **lean clays**.
- If $PL \geq LL$ I_p is reported as zero.
- Soil classification related to plasticity Index :

I_p (%)	Soil Description
0	Non Plastic
1 to 5	Slight Plastic
5 to 10	Low Plastic
10 to 20	Medium Plastic
20 to 40	Highly Plastic
> 40	Very Highly Plastic

2.9.2 Relative Consistency or Consistency-Index (I_c)

- It is defined as a ratio of the difference between the liquid limit and the natural water content of the soil to its plasticity index.

$$I_c = \frac{w_L - w_N}{I_p} \quad \left. \begin{array}{l} \text{for } w_N = w_L \Rightarrow I_c = 0 \\ \text{for } w_S = w_P \Rightarrow I_c = 1 \end{array} \right\}$$

- If $I_c < 0$, the natural water content of soil (w_N) is greater than w_L and the soil mass behaves like a liquid, but only upon disturbance.
- If $I_c > 1$, soil is in semi solid state and will be very hard or stiff.

2.9.3 Liquidity Index (I_L)

- It is defined as the ratio of the difference between the natural water content of a soil and its plastic limit to its plasticity index.

$$I_L = \frac{w_n - w_p}{I_p}$$


- For a soil in plastic state I_L varies from 0 to 1.

Consistency	Description	I_C	I_L
Liquid	Liquid	< 0	> 1
Plastic	Very Soft	0 – 0.25	0.75 – 1.00
	Soft	0.25 – 0.5	0.50 – 0.75
	Medium Stiff	0.50 – 0.75	0.25 – 0.50
	Stiff	0.75 – 1.00	0.0 – 0.25
Semi-Solid	Very Stiff or Hard	> 1	< 0
Solid	Hard or Very Hard	> 1	< 0

2.9.4 Flow Index (I_f)

- It is the slope of flow curve, obtained between the number of blows and the water content in the A Casagrande test for the determination of liquid limit.

$$I_f = \frac{w_1 - w_2}{\log_m \left(\frac{N_2}{N_1} \right)}$$

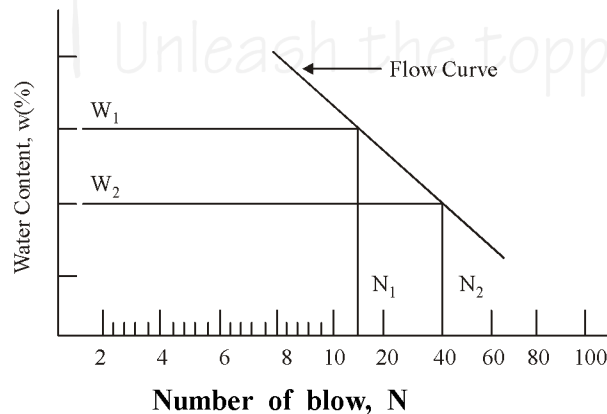

- I_f indicates the rate of loss in shearing strength upon increase in water content.
- Soil having higher value of I_f (steeper flow curve) possesses lower shear strength, whereas, a soil having lower value of I_f (flatter flow curve) has higher shear strength.

2.9.5 Toughness Index (I_T)

- It is defined as the ratio of plasticity index to the flow index.

$$I_T = \frac{I_p}{I_f}$$

- I_T gives an idea about the shear strength of a soil at plastic limit. For the same value of plasticity index, two soils exhibit different toughness bases on flow indices.
- For most of the soils : $0 < I_T < 3$
- When $I_T < 1$, the soil is friable (easily crushed) at the plastic limit.
- **Shrinkage Ratio (SR)** : It is defined as the ratio of a given volume change in a soil, expressed as a percentage of the dry volume, to the corresponding change in water content above the shrinkage limit.

$$SR = \frac{\frac{V_1 - V_2}{V_d} \times 100}{w_1 - w_2}$$

Where,

V_1 = volume of soil mass at water content $w_1\%$.

V_2 = volume of soil mass at water content $w_2\%$.

V_d = volume of dry soil mass

Now, at SL.

$$w_2 = w_s \text{ and } V_2 = V_d$$

$$\therefore SR = \frac{\left(\frac{V_1 - V_d}{V_d} \times 100 \right)}{(w_1 - w_s)}$$

If w_1 and w_2 are expressed as ratio.


$$SR = \frac{\frac{V_1 - V_2}{V_d}}{w_1 - w_2}$$

But


$$w_1 - w_2 = \frac{(V_1 - V_2)\gamma_w}{W_s}$$

$$\therefore SR = \frac{W_s}{V_d} \cdot \frac{1}{\gamma_w} = \frac{\gamma_d}{\gamma_w}$$

- **Stress-strain curve for difference consistency states**

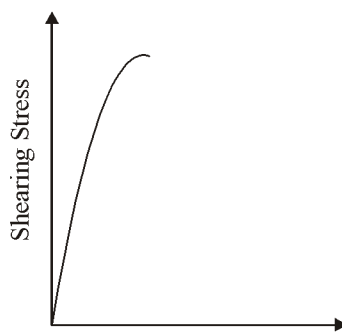

(a) $I_L < 0$ (brittle)

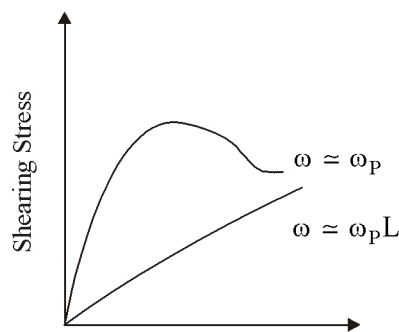

(b) $0 < I_L < 1$ (plastic)



(c) $I_L > 1$ (liquid)

- **Unconfined Compressive Strength (q_u)** : Defined as the load per unit area at which an unconfined prismatic or cylindrical specimen of standard dimensions of a soil fails in a simple compression test.
- $q_u = 2 \times$ shear strength of a clay soil (under un-drained condition).
- q_u is related to consistence of clays as:

Consistency	q_u (kN/m ²)	(Kg/cm ²)
Very Soft	< 25	< 0.25
Soft	25 – 50	0.25 – 0.50
Medium	50 – 100	0.50 – 1.0
Stiff	100 – 200	1.0 – 2.0
Very Stiff	200 – 400	2.0 – 4.0
Hard	> 400	> 4.0

- **Sensitivity (S_t)** : It is defined as the ratio of the unconfined compressive strength of an undisturbed specimen of the soil to the unconfined compressive strength of a specimen of the same soil after remolding at unaltered water content.

$$S_t = \frac{(q_u)_{\text{undisturbed}}}{(q_u)_{\text{remoulded}}}$$

- Soil classification based on sensitivity:

Sensitivity	Classification
1-4	Normal
4-8	Sensitive
8-16	Extra-Sensitive
> 16	Quick

- **Thixotropy** : It is the property of certain clays by virtue of which they regain, if left alone for a time, a part of the strength lost due to remolding, at unaltered moisture content.
- Higher the sensitivity, larger the thixotropic hardening.

2.9.6 Relative Density/Density Index

- The degree of looseness or denseness of natural deposits of coarse grained soils can be measured in terms of their relative density.
- It is most important soil aggregate property of a coarse grained soil.
- It is defined as:

$$D_r \text{ or } I_D = \frac{e_{\max} - e}{e_{\max} - e_{\min}} \times 100\%$$

Where,

e_{\max} = void ratio in loosest state

e_{\min} = void ratio in densest state

e = void ratio in natural state.

- Relative density based classification of Granular Soils:

$I_D(\%)$	Classification
0-15	Very Loose
15-35	Loose
35-65	Medium
65-85	Dense
> 85	Very Dense

Using relation,

$$e = \frac{G\gamma_w}{\gamma_d} - 1.$$

$$I_D = \frac{(\gamma_d)_{\max}}{\gamma_d} \times \frac{\gamma_d - (\gamma_d)_{\min}}{(\gamma_d)_{\max} - (\gamma_d)_{\min}} \times 100$$

Where

$(\gamma_d)_{\max}$ = max dry unit weight

$(\gamma_d)_{\min}$ = min dry unit weight

γ_d = dry unit weight in natural state of the deposit.

- The values of e_{\max} and e_{\min} for a granular soil assuming the soil grains are spherical and uniform is given as:

$$\left. \begin{array}{l} e_{\max} = 91\% \\ e_{\min} = 35\% \end{array} \right\}$$

- Activity** : Plasticity index (I_p) is directly proportional to the % of clay size particles by weight.
- On the basis of this, the soil parameter activity is defined as:

$$\text{activity of clay} = \frac{\text{plasticity Index}}{\% \text{ by weight finer than } 2\mu}$$

- Activity based classification of clays

Activity	Classification
< 0.75	Inactive
0.75 – 1.25	Normal
> 1.25	Active

EXAMPLES

Example :

A sheet of water of thickness 1 m is available to fill the voids of cohesion less soil to a degree of saturation of 80%. The soil has a void ratio of 0.5. Find the thickness of soil layer required to accommodate this amount of water

Solution :

Available water depth, $d_w = 1\text{m}$

Example :

Soil has been compacted in an embankment at a bulk density of 2.15 Mg/m^3 and a water content of 12%. The value of specific gravity of soil solids is 2.65. The water table is well below the foundation level. Estimate the dry density, void ratio, degree of saturation and air content of the compacted soil.

Solution :

Given

$$\gamma = 2.15 \text{ Mg/m}^3$$

$$w = 12\%$$

$$G = 2.65,$$

take

$$\gamma_w = 1 \text{ Mg/m}^3$$

$$\gamma_d = \frac{\gamma}{1+w} = \frac{2.15}{1+0.12} = 1.92 \text{ Mg/m}^3$$

$$\gamma_d = \frac{\gamma_w \cdot G}{1+e}$$

$$1.92 = \frac{1 \times 2.65}{1+e}$$

$$e = 0.38$$

$$e = \frac{w \cdot G}{S_r}$$

$$0.38 = \frac{0.12 \times 2.65}{S_r}$$

$$S_r = 0.837 \text{ or } 83.7\%$$

$$a_c + S_r = 100$$

$$a_c = 100 - S_r = 16.3\%$$

Example :

A soil sample has a porosity of 40 per cent. The specific gravity of solids is 2.70. Calculate (a) voids ratio, (b) dry density, (c) unit weight if the soil is 50% saturated and (d) unit weight if the soil completely saturated.

Solution :Given, $n = 40\% = 0.4$; $G = 2.70$

$$(a) \text{ We have } e = \frac{n}{1-n} = \frac{0.4}{1-0.4} = 0.667$$

$$(b) \quad \gamma_d = \frac{G \gamma_w}{1+e} = \frac{2.7 \times 9.81}{1+0.667} = 15.89 \text{ kN/m}^3 \quad (\text{Taking } \gamma_w = 9.81 \text{ kN/m}^3)$$

$$(c) \quad e = \frac{w G}{S} \text{ or } w = \frac{e S}{G} = \frac{0.667 \times 0.5}{2.70} = 0.124$$

$$\gamma_d = 15.89 \text{ kN/m}^3 \text{ (as before)}$$

$$\therefore \gamma = \gamma_d(1+w) = 15.89 \times 1.124 = 17.85 \text{ kN/m}^3$$

$$\text{Check : } \gamma = \frac{\gamma_w(G+eS)}{1+e} = \frac{9.81(2.70+0.667 \times 0.5)}{1+0.667} = 17.85 \text{ kN/m}^3$$

(d) When the soil is fully saturated, $e = G w_{\text{sat}}$

$$\therefore w_{\text{sat}} = \frac{e}{G} = \frac{0.667}{2.70} = 0.247$$

$$\therefore \gamma_{\text{sat}} = \gamma_d(1 + w_{\text{sat}}) = 15.89 \times 1.247 = 19.81 \text{ kN/m}^3$$

$$\begin{aligned} \text{Alternatively, } \gamma_{\text{sat}} &= G\gamma_w(1-n) + \gamma_w n = 2.7 \times 9.81(1-0.4) + 9.81 \times 0.4 \\ &= 15.89 + 3.92 = 19.81 \text{ kN/m}^3 \end{aligned}$$

Example :

An embankment, having total volume of 2000 m^3 is to be constructed having a bulk density of 1.98 g/cm^3 and a placement water content of 18%. The soil is to be borrowed either from borrow area A or borrow area B, which have voids ratio of 0.78 and 0.69 respectively and water content of 16% and 12% respectively. Taking $G = 2.66$ for both the soils, determine the volume of soil required to be excavated from each of the areas. If the cost of excavation is Rs. 35 per m^3 in each area, but cost of transportation is Rs. 32 and 36 per m^3 from areas A and B respectively. Which of the borrow area is more economical?

Solution :

$$\begin{aligned} \text{For the embankment, } \rho_d &= \frac{\rho}{1+w} = \frac{1.98}{1+0.18} = 1.678 \text{ g/cm}^3 = 1.678 \text{ t/m}^3 \\ \therefore M_d &= \rho_d \cdot V = 1.678 \times 2000 = 33.56 \text{ t} \end{aligned}$$

$$\text{(a) Borrow area A : } \rho_d = \frac{G \rho_w}{1+e} = \frac{2.66 \times 1}{1+0.78} = 1.494 \text{ g/cm}^3 = 1.494 \text{ t/m}^3$$

$$\therefore V = \frac{M_d}{\rho_d} = \frac{33.56}{1.494} = 2246 \text{ m}^3$$

$$\text{Cost of excavation and transportation} = (32 + 36) 2246 = \text{Rs. } 150482$$

$$\text{(b) Borrow area B : } \rho_d = \frac{G \gamma_w}{1+e} = \frac{2.66 \times 1}{1+0.69} = 1.574 \text{ g/cm}^3 = 1.574 \text{ t/m}^3$$

$$\therefore V = \frac{M_d}{\rho_d} = \frac{33.56}{1.574} = 2132 \text{ m}^3$$

$$\text{Cost of excavation and transportation} = (35 + 36) 2132 = \text{Rs. } 151372$$

Hence borrow area A is more economical.

Example :

A soil deposit has a void ratio of 0.9. If the void ratio is reduced to 0.6 by compaction, find the percentage volume loss due to compaction.

Solution :

Given : $e_1 = 0.9$; $e_2 = 0.6$. Let us use symbol 1 for initial condition and 2 for finally compacted condition.

$$\text{Initially } \frac{V_{v1}}{V_s} = e_1 = 0.9$$

$$\text{Hence } V_{v1} = 0.9 V_s$$

$$\therefore V_1 = V_{v1} + V_s = 0.9V_s + V_s = 1.9V_s \quad \dots(1)$$

$$\text{Finally } \frac{V_{v2}}{V_s} = e_2 = 0.6$$

$$\text{Hence } V_{v2} = 0.6 V_s$$

$$\therefore V_2 = V_{v2} + V_s = 0.6V_s + V_s = 1.6V_s \quad \dots(2)$$

$$\therefore \% \text{ loss of volume} = \frac{1.9V_s - 1.6V_s}{1.9V_s} \times 100 = 15.79\%$$

□□□